



## **Assembly and Operating Instructions** **Flow Meter / Flow Switch RA 87 / FA 87**

Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases



- Calibrated borosilicate measuring cone
- Armature completely made of stainless steel
- Perspex half-shell as shatter protection
- Reliable due to simple mode of operation
- Scales specific for the media to be measured
- Optionally:
  - Limit value switches
  - Analogue output 4 ... 20 mA
  - Explosion-proof design
  - PVDF lining for flow measurement of aggressive fluids

B-EN-RA87-20220628



## Assembly and Operating Instructions Flow Meter / Flow Switch RA 87 / FA 87

Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases

### Inhalt

1	Foreword	4
2	Safety	4
2.1	Symbol and meaning	4
2.2	General safety directions and exemption from liability	4
2.3	Intended use	4
2.4	Special safety instructions concerning glass devices	5
2.5	Information for operator and operating personnel	5
2.6	Regulations and guidelines	5
2.7	Notice as required by the hazardous materials directive	5
3	Transport and storage	6
4	Installation	6
4.1	Work preparatory to installation	6
4.2	Preparation of the measuring device	6
4.3	Installation RA 87 G	7
4.4	Installation RA 87 RP	7
4.5	Installation FA 87 DN	7
5	Start-up	8
6	Readings in operation	8



## Assembly and Operating Instructions Flow Meter / Flow Switch RA 87 / FA 87

Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases

### Inhalt

7	Limit switches MSK1/MSK12/MSKW	8
7.1	Connection of limit switches	9
7.2	Setting the limit switches	9
8	Linear displacement sensor 4 ... 20 mA/0 ... 10 V	11
8.1	Connection of the linear displacement sensor	11
8.2	Setting the sensor	12
9	Maintenance and cleaning of the flow metergerätes	12
9.1	Dismanteling and installation	12
9.2	Replacement of measuring glass	13
10	Service	14
10.1	Disposal	14
11	Technical data	15
11.1	Materials	16
11.2	Measuring ranges	17
11.3	Dimensions	18
11.4	Limit value switches MSK1/MSK12/MSKW	21
11.5	Right angle plug M12 x 1	22
11.6	Linear displacement sensor	23
11.7	Low-Voltage Directive	24
12	Important notes!	25



## Assembly and Operating Instructions Flow Meter / Flow Switch RA 87 / FA 87

Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases

### 1 Foreword

These Installation and Operating Instructions are applicable to devices of Series RA 87 and FA 87. Please follow all instructions and information given for installation, operation, inspection and maintenance. The instructions form a component part of the device and should be kept in an appropriate place accessible to the personnel in the vicinity of the location. Where various plant components are operated together, the operating instructions pertaining to the other devices should also be observed.

### 2 Safety

#### 2.1 Symbol and meaning



Safety notice

This symbol is placed against all directions/information relating to occupational health and safety in these Installation and Operating Instructions and draws attention to danger to life and limb. Such notices should be strictly observed.

#### 2.2 General safety directions and exemption from liability

This document contains basic instructions for the installation, operation, inspection and maintenance of the variable area flow meter. Non-observance of these directions can lead to hazardous situations for man and beast and also to damage to property, for which Schmidt Mess- und Regeltechnik disclaims all liability.

The operator is required to rule out potentially hazardous situations through voltage and released media energy.

#### 2.3 Intended use

The Series RA 87/FA 87 devices are variable area flow meters designed for liquids and gases and for installation in vertical pipe runs. Installation in the pipeline should be carried out solely in accordance with these Instructions. The required version of variable area flow meter should be selected on the basis of the pipe diameter at the point of use of the device. The limit values pertaining to the device are given in Section 11 and should not be exceeded. Modifications or other alterations to the flow meter may only be carried out through the manufacturer. Installation in horizontal pipe runs is possible using appropriate pipe bends. The direction of flow must always be from bottom to top. Details of the process product and the operating conditions are marked on the measuring glass.



## Assembly and Operating Instructions Flow Meter / Flow Switch RA 87 / FA 87

Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases

### 2.4 Special safety instructions concerning glass devices



For safety reasons, we recommend fitting a protective shield in front of the measuring tube when starting up flow meters fitted with glass measuring tubes. The devices should not be operated where there is a risk of pressure surges (water hammer)!

To avoid glass breakage, all fitting work between measuring glass and heads inside the glass should be carried out by twisting and simultaneously pressing after having wetted the gaskets.

### 2.5 Information for operator and operating personnel

Authorized installation, operating, inspection and maintenance personnel should be suitably qualified for the jobs assigned to them and should receive appropriate training and instruction. All persons charged with assembly, mounting, operation, inspection and maintenance duties must have read and understood the operating instructions. Gaskets in contact with the fluid product must be replaced after all maintenance and repair work.

### 2.6 Regulations and guidelines

In addition to the directions given in these Installation and Operating Instructions, observe the regulations, guidelines and standards, such as DIN EN and for specific applications, the codes of practice issued by DVGW (gas and water) and VdS (underwriters) or the equivalent national codes and applicable national accident prevention regulations.

### 2.7 Notice as required by the hazardous materials directive

In accordance with the law concerning handling of waste (critical waste) and the hazardous materials directive (general duty to protect), we would point out that all flow meters returned to Schmidt Mess- und Regeltechnik for repair are required to be free from any and all hazardous substances (alkaline solutions, acids, solvents etc.).



Make sure that devices are thoroughly rinsed out to neutralize hazardous substances.



## Assembly and Operating Instructions Flow Meter / Flow Switch RA 87 / FA 87

Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases

### 3 Transport and storage

Always use the original packing for transport, handling and storage. Protect the device against rough handling, coarse impact, jolts etc.

### 4 Installation

#### 4.1 Work preparatory to installation

Preparation of the installation point:

- Check the pipe run at the point of installation. Variable area flow meters are only suitable for vertical installation and an upward flow direction (from bottom to top). For all other installation situations, appropriate pipe bends need to be fitted in the existing pipeline to ensure upward vertical flow through the device.
- The region of steady flow should be 4 to 6 x DN upstream and downstream of the location. Control equipment for gaseous media in particular should be installed downstream of the flow meter.
- If necessary, support the pipeline on both sides of the flow meter to prevent vibration from being transferred to the device.
- Before connecting, clean the pipelines leading to the device by blowing out or flushing.
- Prepare the installation point for the measuring device with appropriate pipe threads (RA 87) or flanges (FA 87) before beginning installation work. Pay attention to the correct spacing of the sealing faces and to exact alignment.
- Under no circumstances should the variable area flow meter be used to draw the pipe ends together (install free of stresses!). Do not over-tighten the union nuts.

#### 4.2 Preparation of the measuring device

1. Remove the device from the transport packing.
2. Remove the transport protection stoppers from the ends of the device.
3. Pull the float securing rod out of the device (PVC red or grey).
4. Check that the float can move freely in the device.
5. Have ready: flat gaskets (FA 87) or packing material such as hemp (RA 87). These are not included with the supply.



## Assembly and Operating Instructions Flow Meter / Flow Switch RA 87 / FA 87


Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases

### 4.3 Installation RA 87 G

When screwing in adjacent fittings, use the flat sides at the ends of the device for counter-holding with a suitable open-end spanner. Use suitable packing material.


### 4.4 Installation RA 87 RP

1. Dismantle the inserts (item 9) and the union nuts (item 8) from the device.
2. Slip the union nuts over the ends of the pipeline at the installation point.
3. Screw the inserts on to the pipe ends together with packing material.
4. Slide the device with the gaskets (item 10) at both ends into the installation point.
5. Screw the union nuts back on to the device heads (item 2) and tighten them down such that the device is seated in the pipeline without stresses.

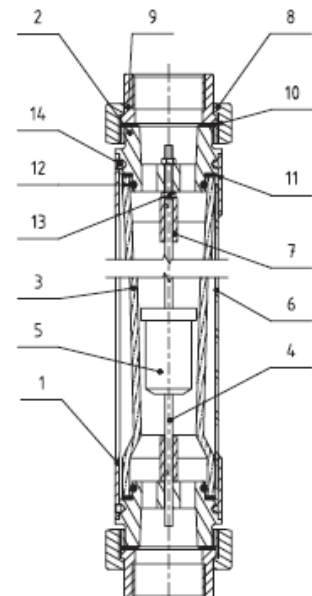

### 4.5 Installation FA 87 DN

1. Slide the device together with the gaskets (not included with flow meter) at both ends (item 2) into the installation point.
2. Check that the gaskets are in alignment and make sure they do not project into the pipeline.
3. Fit the bolts and nuts of the flanged connection loosely.
4. Tighten bolts on the flanged connection in diagonally opposed sequence so that the device is fastened in the pipeline without stresses.

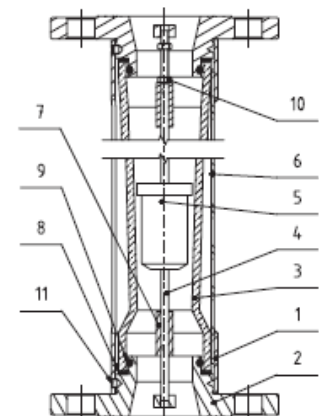



## Assembly and Operating Instructions Flow Meter / Flow Switch RA 87 / FA 87

Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases

### 5 Start-up

The device must be properly installed before it is started up.

1. Check all device connections.
2. To set the flow: pressurize the pipelines by slowly opening the shut-off valves. On liquid service: carefully vent the pipeline.
3. Check the leak-tightness of all components and if necessary, tighten down threaded joints or screw connections.

### 6 Readings in operation

The flow value is read off from the scale on the glass cone at the top edge of the float. The measured-value readings are only correct when the operating condition at the measuring point (flowing medium, operating pressure and temperature) corresponds to the values marked on the measuring glass. If operating conditions should differ, the measured value must be corrected with the aid of the general float equation.

Information on theoretical basics and an conversion program can be found on our website: [www.kt-flow.de](http://www.kt-flow.de), section physics and calculations.

### 7 Limit switches MSK1/MSK12/MSKW

The flow meter can be equipped with limit switches to provide local indication with monitoring function.

The limit switches consist of a limit switch (reed switch) that is switched over by the magnet integrated in the float.

The limit switch is guided in a guide slot in the protective case and can be adjusted over the full measuring range. The reed switches have a bistable characteristic.

Uncontrolled current and voltage peaks can occur in the case of inductive or capacitive loads, e.g. from contactors or solenoid valves. Such peaks will also occur, depending on cable geometry, where cables exceed a certain length.

We therefore recommend using an MSR contact protection relay, which is additionally available.

This will increase the contact rating and prevent occurrence of inductive and capacitive peaks, thus ensuring long service life of the contacts.

The electrical connection data and limit values must be observed in accordance with section 11.4.





## Assembly and Operating Instructions Flow Meter / Flow Switch RA 87 / FA 87

Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases

### 7.1 Connection of limit switches



Electrical connection of the device must be carried out in conformity with the relevant VDE regulations (or equivalent national standards) and in accordance with the regulations issued by the local power supply utility.

1. Disconnect the plant from supply before connecting the limit switch.
2. Provide a protective circuit for the switches in keeping with their capacity.
3. Connect line-side fuse elements matched to consumption.
4. Connect the cable using the supplied right-angle plug (section 11.5). The circuit diagram for the limit switches is shown in the Technical Data (section 11.4).

### 7.2 Setting the limit switches


1. Loosen the lock nut ⑥ SW13 (M8 x 1) on the neck of the switch ①.
2. Slide the switch ① to the flow value required to be monitored.
3. Please make sure the contact ① never touches the measuring glass ④ and the clearance between contact ① and glass ④ is always approx. 1 mm. This clearance can be obtained by turning the contact in the sliding block ⑦.
4. Test the switching characteristic by moving the float ⑤ over and beyond the switching position.
5. Retighten the lock nut ⑥. **Maximum fastening torque is 2 Nm!**



# Assembly and Operating Instructions

## Flow Meter / Flow Switch RA 87 / FA 87

Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases

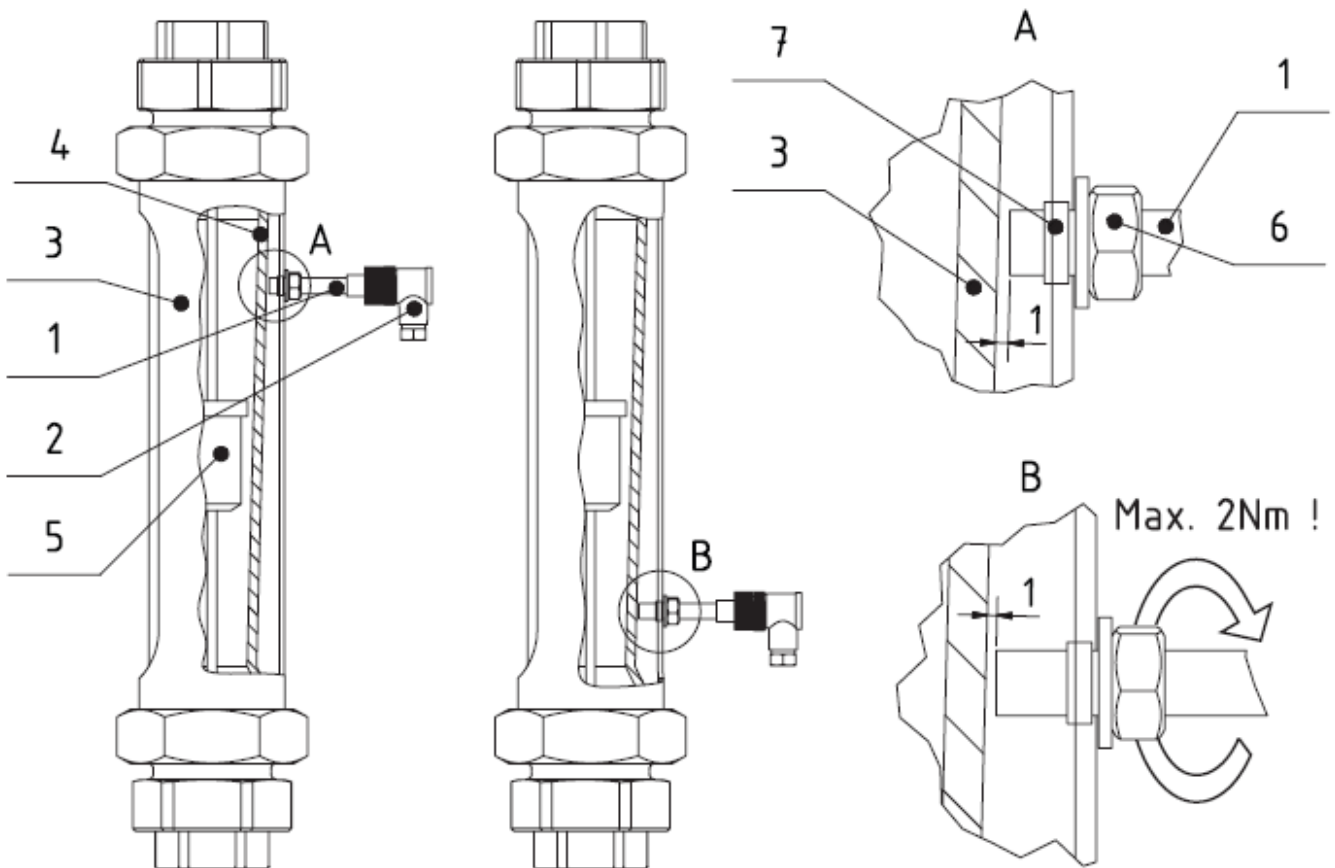

- ① MSK Grenzwertschalter
- ② M12 Winkelstecker
- ③ Durchflussmessgerät
- ④ Messglas
- ⑤ Schwebekörper
- ⑥ Spannmutter
- ⑦ Nutenstein

B-EN-RA87-20220628



## Assembly and Operating Instructions Flow Meter / Flow Switch RA 87 / FA 87

Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases

### 8 Linear displacement sensor 4 ... 20 mA/0 ... 10 V

The linear displacement sensor, based on the Hall effect, delivers an output signal proportional to the height setting of the flow meter.

The signal can be displayed in 4 ... 20 mA or 0 ... 10 V and is used for remote flow rate observation. The sensor is connected via the enclosed M12 x 1 mm connector.

Please notice, that the sensor has a blind zone in the range of 3.7 mA to around 4 mA and performs stable operation only after approx. 4 mA.

#### 8.1 Connection of the linear displacement sensor



The electrical connection of the device must be performed according to the pertinent VDE regulations, as well as the regulations of the local power company.

1. Disconnect electric power from the system before connecting the sensor.
2. Provide a protective circuit of the sensor corresponding to its output.
3. Connect the protective elements suitable for use upstream.
4. The cable connection is done on the enclosed angle connector. The circuit diagram for the sensor is in the following illustration:

Type	Circuit diagram	Pin assignment
3-wire		
2-wire		

B-EN-RA87-20220628



## Assembly and Operating Instructions Flow Meter / Flow Switch RA 87 / FA 87

Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases

### 8.2 Setting the sensor

The linear position sensor is delivered adjusted to the lowest measuring range point. This corresponds to an output signal of 4 mA.

The remaining measuring range or mA values can be taken from the supplied protocol. If you want to move the 4 mA value to another measuring range point, move the sensor or the 4 mA value to the requested point.

To do this, loosen the two outer nuts with their lock washers. Next loosen the two stud screws by approximately one turn. Now you can move the sensor to the desired position and tighten the stud bolts and nuts again.

To record the new mA values, move the float to the desired scale lines and note the mA values.

## 9 Maintenance and cleaning of the flow meter

The device is maintenance-free. Should the glass cone become fouled, the device can be removed from the pipeline as follows.

### 9.1 Dismantling and installation

Remove the flow meter out of the system by detaching the union nuts or, as the case may be, the screw connections and/or pipe unions. After dismantling the upper head (detach the radial retaining screw), remove the measuring glass from the device and clean the individual parts. Reassemble in reverse order. Pay special attention to correct installation of the appropriate gaskets and the float stops. Before installing, inspect all gaskets (see pictures section 4.3 and 4.4) for signs of damage and replace if necessary.



## Assembly and Operating Instructions Flow Meter / Flow Switch RA 87 / FA 87

Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases

### 9.2 Replacement of measuring glass

Refer to Figure in section 4.4 resp. 4.5

1. Remove the device from the installation point. Detach the lateral retaining screws and remove the heads from the glass by simultaneously twisting and pulling them out of the glass. On devices with guide rod, leave the rod mounted on the upper head!
2. On devices with non-guided floats, remove the float stops and the float from the old glass.
3. Insert the float stops and the float into the new glass. Screw the float stops (helical springs made of VA steel) carefully with a pair of pliers into the glass ends (risk of glass breakage!).
4. Fit the device heads with new O-rings and gaskets.
5. Wet the O-ring before assembling glass and head.
6. Carefully slide the lower device head into the bottom opening of the measuring glass, twisting and pushing simultaneously (risk of glass breakage!).
7. Insert the glass with head into the case, making sure not to knock the glass against the case.
8. Fasten the device head with the retaining screws to the case.
9. Align the glass cone so that the inscriptions can be read off through the viewing window in the case.
10. Slide the second head with wetted O-ring by simultaneously twisting and pushing it into the upper opening of the measuring glass or steel case. Also lock the head in place on the case.
11. On devices with guide rod, check float mobility. If necessary, correct the position by turning the guide rod (to do this, hold the plain end of the guide rod at the lower head with a pair of engineer's pliers, or similar tool, and slightly loosen the M5 screw on the opposite side).
12. Reinstall the device in the installation point.



## Assembly and Operating Instructions Flow Meter / Flow Switch RA 87 / FA 87

Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases

### 10 Service

All devices with defects or deficiencies should be sent back to Schmidt Mess- und Regeltechnik. To avoid risks to our employees and the environment, we can only process devices, for which we get a declaration of decontamination certifying that they are safe due to legal regulations. For questions, please contact our sales department, Tel. +49 6732 919120.

#### 10.1 Disposal

Please help to protect our environment and dispose workpieces in conformity with current regulations resp. continue using them.



## Assembly and Operating Instructions Flow Meter / Flow Switch RA 87 / FA 87

Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases

11 Technical data	
Nominal pressure rating	FA 87: PN 10 at 20°C RA 87: PN 10 at 20°C
Max. operating pressure	see table measuring ranges (section 11.2)
Temperature resistance	80°C, optionally 100°C
Ambient temperature	90°C
Measuring range	1:10
Accuracy class Error limit (G) Linear limit (qG)	1.6 nach VDI/VDE 3513 page 2 (08/2008) 1,6 % 50%
Connection RA 87	<ul style="list-style-type: none"> <li>G: cylindrical female fastening thread acc. to ISO 288</li> <li>Rp: two-part pipe union: insert with cylindrical internal thread acc. to DIN EN 10226-1 (ISO 7-1)</li> </ul>
Connection FA 87	flanges PN 10 acc. to DIN EN 1092-1, others (ANSI, JIS ...) on request



## Assembly and Operating Instructions Flow Meter / Flow Switch RA 87 / FA 87

Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases

<b>11.1 Materials</b>	
Protective tube	1.4301
Heads RA 87	1.4571, optionally PVDF <sup>1</sup>
2-part-fitting	1.4571, optionally PVDF <sup>1</sup>
Flanges FA 87	1.4571, optionally with PVDF inlay <sup>1</sup>
Measuring cone	Borosilicate glass
Splinter shield	Perspex
Seals	<ul style="list-style-type: none"> <li>• Standard: FPM</li> <li>• Optionally: EPDM, FFKM (Perlast), silicone</li> </ul>
Floats for liquids <sup>2</sup>	Standard: 1.4571 Optionally: Hastelloy C4
Floats for gases <sup>2</sup>	Standard: PTFE Optionally: PVC, PVDF, PP, aluminum anodized
With limit switches <sup>2</sup>	Standard: 1.4571 with metal core For air: PTFE with metal core Optionally: PP, PVDF, PTFE (each with magnetic core)
Special design <sup>1</sup>	Protection of all parts in contact with media

Other materials on request.

1) PVDF lining: all wetted parts, except the measuring glass, are made from PVC..

2) Floats of small sizes are non guided. Size 30 and larger: partly with guided float.

Optionally sizes 9,5 (without limits switches only) and 19 are deliverable.

A detailed table is available on request.





## Assembly and Operating Instructions Flow Meter / Flow Switch RA 87 / FA 87

Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases

11.2 Measuring ranges						
Size	Measuring range H <sub>2</sub> O  Float all materials	Measuring range air at STP <sup>1</sup>		Connection		Max. Operating pressure in bar at 20°C
		Float PTFE, PVDF	Float PVC, PP	RA 87 female thread	FA 87 flange connection DN	
9,5	0,5 – 5 l/h	8 – 80 l/h	8 – 80 l/h	¼	10	10
	20 – 200 l/h	0,28 – 2,8 m <sup>3</sup> /h	0,2 – 2 m <sup>3</sup> /h	⅜	15	
19	12 – 120 l/h	0,15 – 1,5 m <sup>3</sup> /h	0,14 – 1,4 m <sup>3</sup> /h	½	15	10
	0,12 – 1,2 m <sup>3</sup> /h	1,6 – 16 m <sup>3</sup> /h	1,2 – 12 m <sup>3</sup> /h	¾	20	
				1	25	
30	0,1 – 1 m <sup>3</sup> /h	1,2 – 12 m <sup>3</sup> /h	0,85 – 8,5 m <sup>3</sup> /h	1	25	10
	0,3 – 3 m <sup>3</sup> /h	3 – 30 m <sup>3</sup> /h	2 – 30 m <sup>3</sup> /h	1¼	40	
36	0,4 – 4 m <sup>3</sup> /h	3,5 – 35 m <sup>3</sup> /h	2,5 – 25 m <sup>3</sup> /h	1¼	40	8
	0,8 – 8 m <sup>3</sup> /h	8 – 80 m <sup>3</sup> /h	5 – 50 m <sup>3</sup> /h	1½	50	
43	0,9 – 9 m <sup>3</sup> /h	8 – 80 m <sup>3</sup> /h	6 – 60 m <sup>3</sup> /h	1½	50	8
	1,6 – 16 m <sup>3</sup> /h	16 – 160 m <sup>3</sup> /h	12 – 120 m <sup>3</sup> /h	2	65	

measuring ranges for other substances and operating conditions on request.

1) at STP: at standard conditions (0 °C and 1013 mbar abs.)




## Assembly and Operating Instructions Flow Meter / Flow Switch RA 87 / FA 87

Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases

### 11.3 Dimensions

RA 87 with tube fittings								
Size	(1.4571) Design			Versions				H
	Thread	L	SW <sup>2</sup>	DN	d <sup>1)</sup>	L (PVC)	L (PP, PVDF)	
9,5	Rp ¼	306	27	10	16	302	304	25
	Rp ⅜	309	32	15	20	305	305	
	Rp ½	314	41					
19	Rp ½	414	41	15	20	405	405	44,5
	Rp ¾	416	15	20	25	411	409	
	Rp 1	422	55	25	32	417	413	
30	Rp 1	422	55	25	32	423	419	60
	Rp 1¼	428	70	32	40	432	424	
	Rp 1½	429	75	40	50	442	430	
36	RP 1¼	428	70	32	40	432	424	70
	Rp 1½	429	75	40	50	442	430	
	Rp 2	433	90	50	63	456	438	
43	Rp 1½	429	75	40	50	448	436	89
	Rp 2	433	90	50	63	462	444	

1) only with PVC gluing sleeves and PP-, PVDF welding sleeves

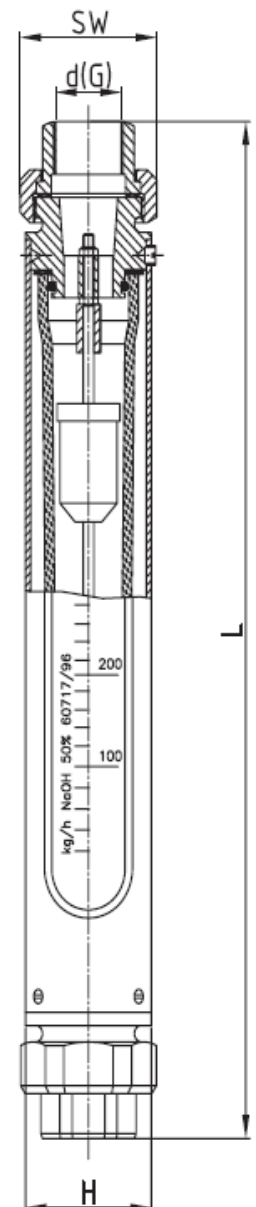




## Assembly and Operating Instructions Flow Meter / Flow Switch RA 87 / FA 87

Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases

RA 87 with female thread						
Size	G	DN	SW1 <sup>2</sup>	d <sup>1</sup>	L	H
9,5	¼	10	20	12	266	25
	⅜	15		16		
19	½	15	40	20	366	44,5
	¾	20		25		
	1	25		30		
30	1	25	55	32	366	60
	1¼	32		40		
36	1¼	32	65	40	366	70
	1½	40		50		
43	1½	40	82	50	366	89
	2	50		63		

- 1) only with PVC gluing sleeves and PP-, PVDF welding sleeves
- 2) only with sst (1.4571) design

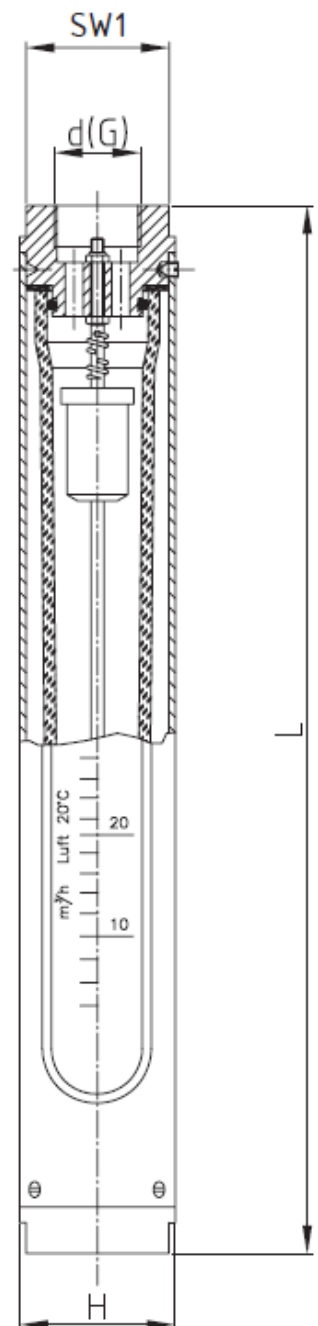




## Assembly and Operating Instructions Flow Meter / Flow Switch RA 87 / FA 87

Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases

FA 87									
Size	DN	L	H	D	d <sub>4</sub>	k	Screws		d <sup>2</sup>
							Qty.	Thread	
9,5	10	260	25	90	40	60	4	M12	14
	15			95	45	65	4	M12	14
19	10	360	44,5	90	40	60	4	M12	M12
	15			95	45	65	4	M12	14
	20			105	58	75	4	M12	14
	25			115	68	85	4	M12	14
30	25	360	60	115	68	85	4	M12	14
	40			150	88	110	4	M16	18
36	40	360	70	150	88	110	4	M16	18
	50			165	102	125	4	M16	18
43	50	360	89	165	102	125	4	M16	18
	65			185	122	145	4	M16	18

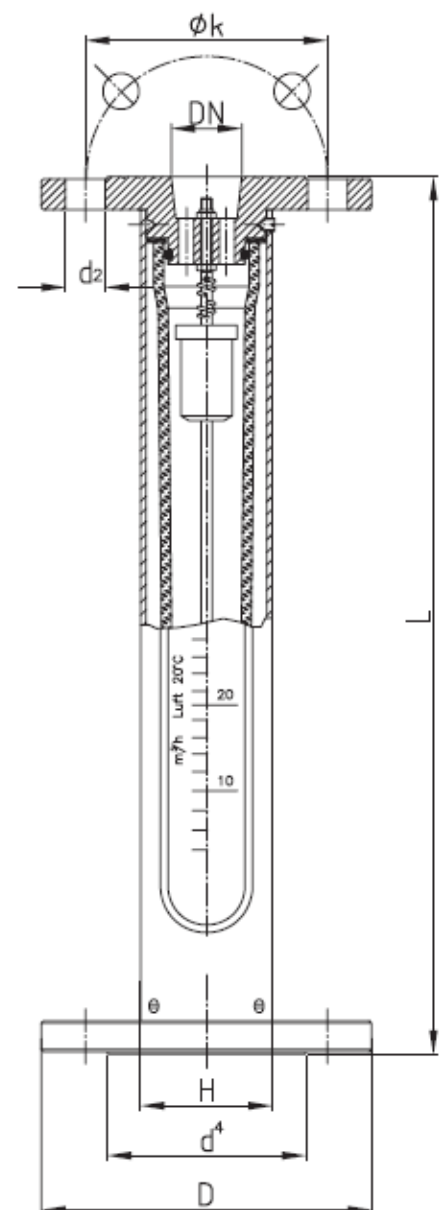



## Assembly and Operating Instructions Flow Meter / Flow Switch RA 87 / FA 87

Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases



11.4 Limit value switches MSK1/MSK12/MSKW			
Design	MSK1	MSK12	MSKW
Switching voltage	50 V AC/75 V DC	50 V AC/75 V DC	50 V AC/75 V DC
Switching current	0,5 A	0,5 A	0,5 A
Switching capacity	10 W/VA	10 W/VA	5 W/VA
Dielectric strength	230 V AC/400 V DC	230 V AC/400 V DC	110 V AC/200 V DC
Temperature range <sup>1)</sup>	-20°C ... +90°C	-20°C ... +90°C	-20°C ... +90°C
Switching function	Normally closed	Normally open	Change over
Connection			
1) The thermal endurance of the flow meter is crucial. Connection via freely configurable right angle plug M12 x 1			



## Assembly and Operating Instructions Flow Meter / Flow Switch RA 87 / FA 87

Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases

11.5 Right angle plug M12 x 1	
Connector	field-wireable female connector, M12 x 1, angled
Number of poles	4-pole, A-coding
Contacts	metal, CuZn, optalloy-plated
Contact carriers	plastic, PA, black
Grip	plastic, PBT, black
Seal	plastic, FKM
Degree of protection	IP67 only tightened with screws
External diameter of the cable	4 – 6 mm
Core cross-section/ Clamping ability	max. 0,75 mm <sup>2</sup>
Screw-in thread	PG 7
Connection mode	screw clamp
Mechanical life span	min. 50 contact durability
Pollution degree	3
Rated voltage	max. 250 V
Insulation resistance	≥ 108 Ω
Ampacity	4 A
Forward resistance	≤ 8Ω
Ambient temperature connector	-25 ... +85 °C

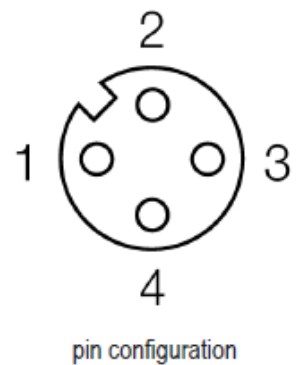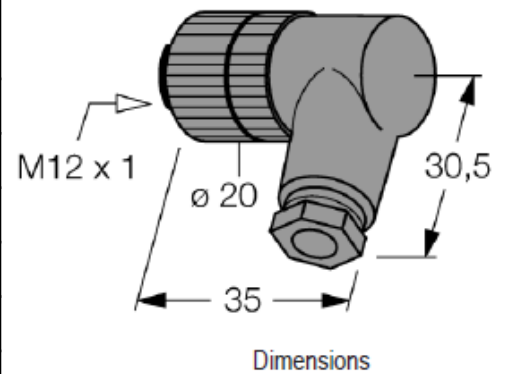



## Assembly and Operating Instructions Flow Meter / Flow Switch RA 87 / FA 87

Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases

11.6 Linear displacement sensor		
Technical data	4-wire	2-wire
Measurement range	125 / 160 mm	
Repeatability	≤ 0,1 % from measurement range ≤ dependent upon position sensor	
Linearity deviation	≤ 1 %	
Temperature drift	≤ ± 0,006 %/K	≤ ± 0,03 %/K
Ambient temperature 1)	-25 ... +65 °C	
Operating voltage	15 ... 30 V DC	14 ... 30 V DC
Residual ripple	< 10 % U <sub>ss</sub>	
Idle current	≤ 15 mA	-
Rated insulation voltage	< 0.5 kV	
Short circuit protection	yes	
Fail-safe circuit/reverse polarity protection	yes / complete	
Output function	4-wire, analogue output	2-wire, analogue output
Voltage output / → Load resistance	0 ... 10 V / ≥ 4,7 kΩ	-
Current output / → Load resistance	4 ... 20 mA / ≤ 0,4 kΩ	4 ... 20 mA / ≤ [(U <sub>B</sub> - 14 V) / 20 mA] kΩ
Recovery time at output	< 15 ms	
Sampling rate	200 Hz	
Type	Rectangular, Q25L	
Dimensions	166 / 201 x 35 x 25 mm	
Housing material	aluminum	
Material of active surface	plastic, PC-GF20	

1) The thermal endurance of the flow meter is crucial.

B-EN-RA87-20220628



## Assembly and Operating Instructions Flow Meter / Flow Switch RA 87 / FA 87

Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases

11.6 Linear displacement sensor		
Technical data	4-wire	2-wire
Vibration resistance	55 Hz (1 mm)	
Shock resistance	30g (11 ms)	
Protection class	IP67	
Approval acc. to	-	KEMA 03 ATEX 1122 X Issue no. 2
Device marking	-	II 2 G Ex ia IIC T6 Gb / II 2 D Ex ia IIIC T85 °C Db
LED, green	power-on indication	
LED, yellow	float in measuring range	
LED, yellow flashing	float not in measuring range after power reset	
Connection	plug connector, M12 x 1	
Connection diagram		
1) The thermal endurance of the flow meter is crucial.		

### 11.7 Low-Voltage Directive

Above 50 V AC/75 V DC, contacts are subject to the EU Low Voltage Directive. The user is required to verify their use accordingly.

B-EN-RA87-20220628





## Assembly and Operating Instructions Flow Meter / Flow Switch RA 87 / FA 87

Measuring units RA 87 and FA 87 are based on the variable area float principle for liquids and gases

### 12 Important notes!

Technical changes and errors excepted.

These operating instructions are an integral part of the device and must be kept accessible to the personnel in the immediate vicinity of the device at all times. Persons who install, operate or service this device must read and understand these operating instructions carefully before starting any work. All safety instructions and instructions in this manual must be adhered to. In addition, the local accident prevention regulations and general safety regulations for the area of application of the device as well as all national and international legal regulations and technical standards apply.

All illustrations in this operating manual serve the basic understanding. Photos can be examples of a variant. The illustrations may differ from the actual design of the units. No claims can be deduced from any deviations.

The device has been designed and constructed exclusively for the intended use described here.

Persons installing, operating or maintaining this device must be technically qualified personnel and must comply with the applicable accident prevention regulations.

### limitations of liability

All information and instructions in this operating manual have been compiled taking into account the applicable standards and regulations, the state of the art as well as our many years of knowledge and experience. Schmidt Mess- und Regeltechnik accepts no liability for damage due to

- Failure to observe this manual
- Improper use of the device
- Working by untrained personnel with this device
- Unauthorized modifications or technical modifications not approved by the manufacturer
- Use of unauthorized spare parts